


HD-CM+

Cable Meter

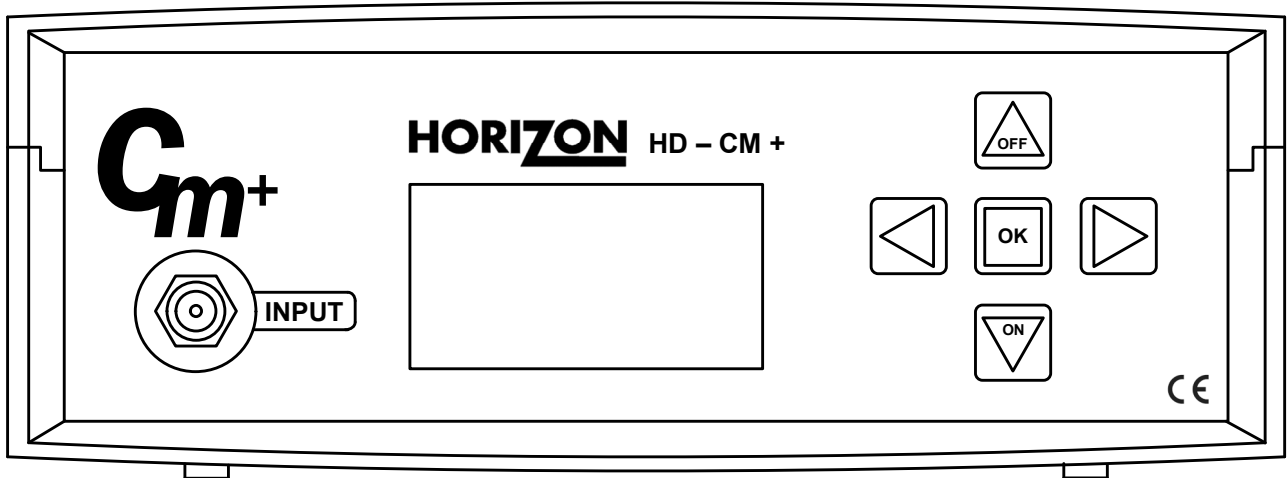

User Manual

Horizon Global Electronics Ltd.

First Floor Office

Allen House

Edinburgh Way

Harlow

Essex

CM20 2HJ

Phone: +44(0) 1279 417 005

Fax: +44(0) 1279 417 025

Email: sales@horizonhge.com

Web: www.horizonhge.com



Issue No. 1

Horizon Part Number: KM165

Contents

Please read through these instructions carefully before using your new HD-CM+ meter to familiarise yourself with all of the features available.

Contents	1
Overview	
Meter MOT	
Safety	2
Battery safety	
Your HD-CM+	3
Accessories	4
Maintenance	5
Battery charging	
User settings	6
Scan type menu overview	
Main menu overview	
Start up	7
Main menu	
Select plan	
Scan type	8
Slope test	9
Voltmeter	
Spectrum	
Constellation	
Leakage test	10
Data logging	
Downloads	
USB Driver Installation	12
Specifications	14
Manufacturer Notes	Rear cover

Overview

Thank you for choosing to purchase the Horizon Global Electronics HD-CM+ cable meter. The HD-CM+ cable meter features all the functions you will need to perform digital and analogue cable installations.

The HD-CM+ has an easy to read 128 x 64 pixel LCD with adjustable brightness and contrast, real-time measurement of analogue and digital carriers, spectrum analyser, constellation diagram (including 256 QAM), slope test, data logging (free software download), replaceable input connector, USB connectivity (for channel plan updates), 12 Volt in-car charger, AC charger (built in), a high capacity Ni-Mh battery, adjustable shoulder strap (detachable) and nylon carry case with an accessory pocket.

Meter MOT

Horizon Global Electronics is now offering a meter MOT service, so that you can be sure that your HD-CM+ is always performing to a reliable standard and giving you the most accurate results for your installation needs. For more details on meter MOT please contact us directly at Horizon Global Electronics by calling us on **+44 (0)1279 417 005** or via our website **www.horizonhge.com**



This symbol is used to alert users of a possible hazard while operating the unit.




- Do not expose this meter to rain or moisture.
- Avoid storing your meter in a vehicle overnight as low temperatures will impact the battery life.
- Clean only with a soft dry cloth.
- Always use the protective case and cover provided.
- Read these instructions through carefully before using your meter for the first time.
- Care should be observed when using the carry strap as this can present a choking hazard; only use the strap when slipping or falling is not a possibility.
- Do not disassemble your meter or interfere with the internal components; as this will void the warranty and there is the possibility of electric shock.

If this equipment is used in a manner that is not specified by the manufacturer, the protection provided by the equipment may be impaired.

Battery safety



This meter is equipped a Ni-Mh battery that should only be charged by the meter either using the AC mains lead or DC car charger provided. The use of other types of charger may result in damage to your Ni-Mh battery back, your meter and be potentially dangerous (cause an electric shock). Always obtain official Horizon Global Electronics replacement batteries through our recognised distributors or from Horizon Global Electronics Ltd directly.

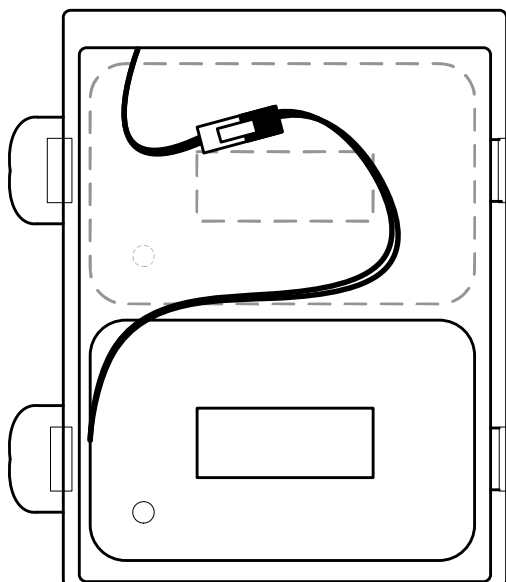

Battery compartment





The HD-CM+ features a battery compartment that can hold a spare battery if required. To disconnect the battery press down on the white tab and pull the black connector. On re-connection push the connectors home so that they clip together.

Remember:



Do not short circuit the battery terminals.
Do not dispose of batteries in fire.
Do not disassemble the battery (there are no user serviceable parts inside).
If damaged remove and replace immediately.

Your HD-CM+

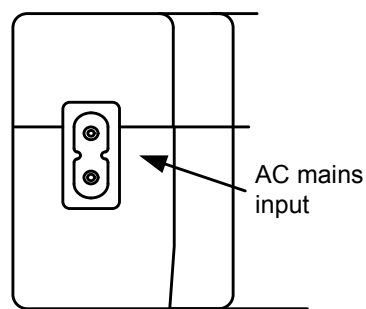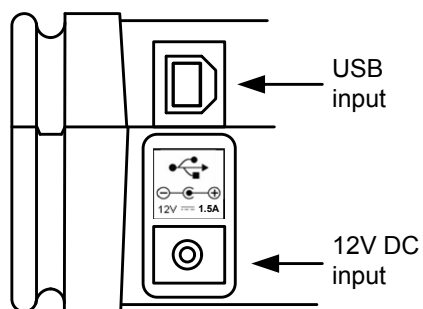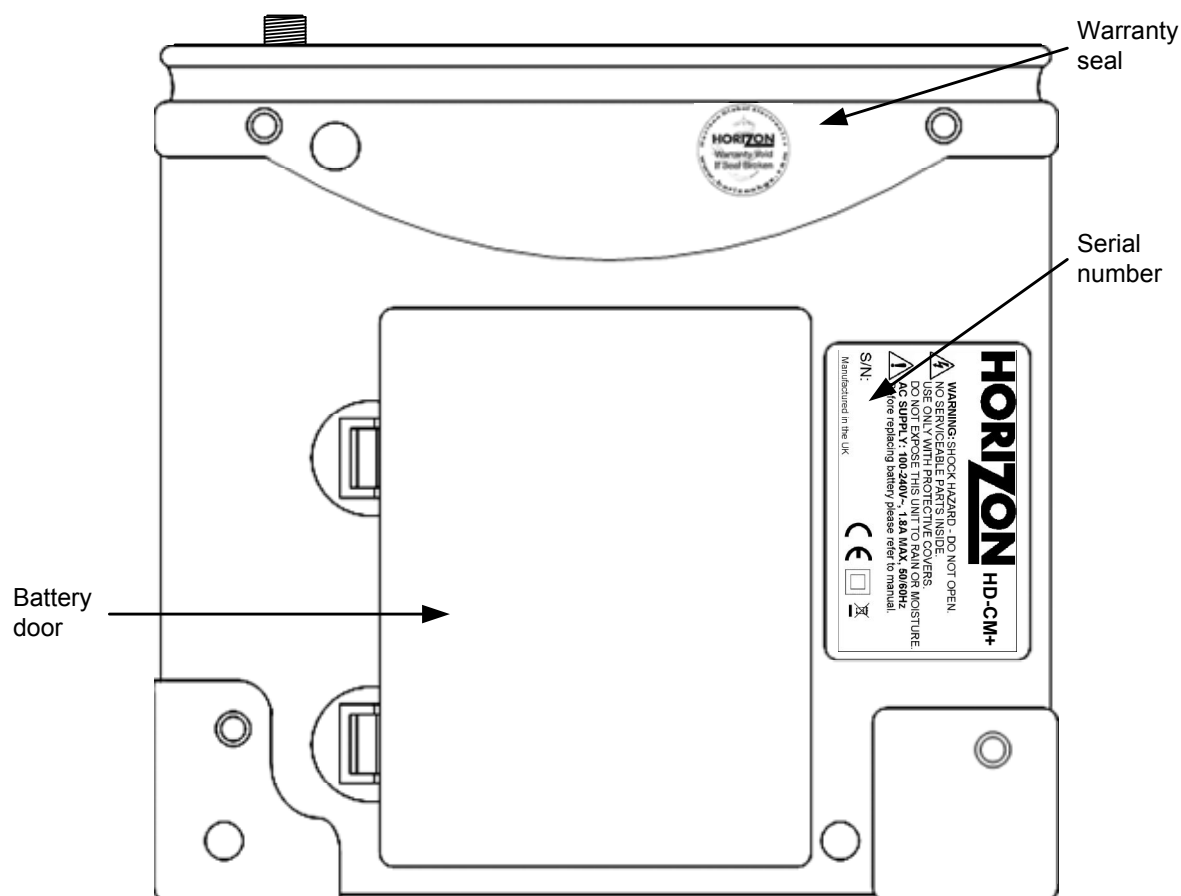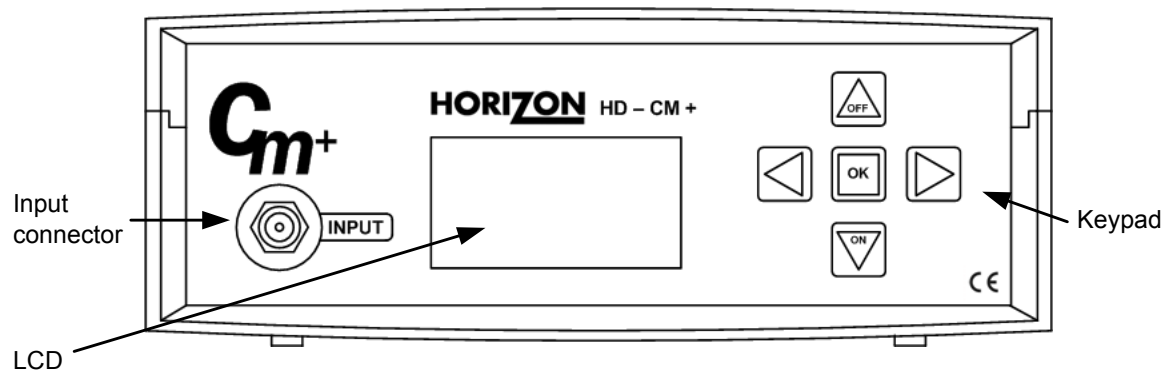

Accessories

The HD-CM+ comes supplied with this instruction manual, and the accessories illustrated below. Please check that all of the items are present, if any items are missing contact your supplier.



Only the manufacturers replacement accessories should be used, otherwise the safety of the meter may be impaired and your warranty would be invalidated.



12V DC Car Charger Lead. Fitted with a 2 Amp protection fuse. (P/N: AW992CIG)



Ni-Mh Rechargeable Battery Pack. (P/N: BP7233/2)



USB lead for transmitter list or firmware updates (P/N: AW998USB)



240V AC Mains lead. Fitted with a 3 Amp protection fuse. (P/N: AW993UKP)




Replaceable F-F barrel connector (fitted) and spare F-F barrel for use with Rubber duck antenna. (P/N: JFFC494N) x2



Nylon carry case with accessory pocket and detachable carry strap. (P/N: AL006BK-2)



Rain cover. (P/N: ARHDCM) The rain cover should remain fitted at all times.

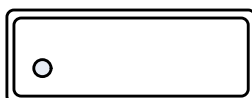

Rubber duck antenna (F-Type) wide band for leakage detection. (P/N: AJDUCKF)



Periodically your input connectors will need replacing to maintain your meter's performance; please refer to page 5 for more details on how to remove and replace the input connector.



Safety note: Do not use the carry strap where there could be a risk of falling or choking. The carry strap is designed to support the weight of the HD-CM+ meter and its accessories only; and should not be used for other than its intended purpose.


Maintenance



Note: Your HD-CM+ features a replaceable F barrel input connector, and periodically this will require replacement and inspection to ensure continued reliable operation. To remove the F barrel connector use an 11 mm or 7/16th spanner (or deep socket).



Carefully clean the surrounding area gently with a dry lint free cloth to prevent debris from falling into the F connector socket well.

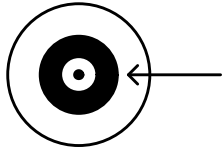


Tip: Check for any copper fragments that may have gathered in the well of the F barrel socket on the meter. These can be removed with a dry cotton bud or air duster. When replacing with a new F barrel connector avoid over tightening, it should only be tight enough to prevent removal by hand.



Battery charging

When you receive your meter the battery will be in a discharged state, we recommend an initial charge of 8 hours (or overnight) prior to first use.

There are two methods of charging the battery, AC mains (through the on board charger) or 12V DC through the car charger accessory supplied. Charging with AC is recommended and charging with DC is useful as a battery top up on route to the next installation when the battery power happens to be low.

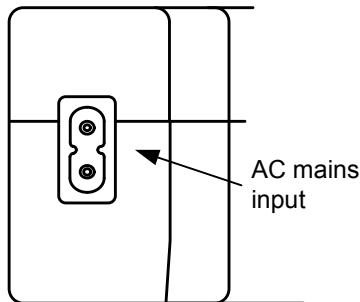

For AC charging a suitable figure of eight mains lead is supplied. The charge circuit can operate on AC voltages from 90 to 250V

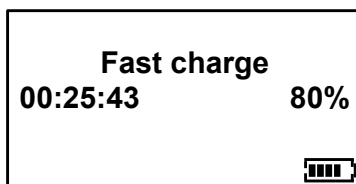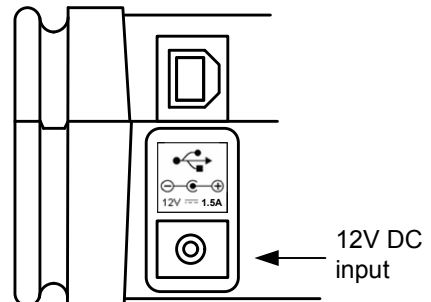

During battery charging the LCD will be active but not back lit, and the current percentage of charge will be shown along with the duration of time that the meter has been on charge. During charging the battery icon in the lower right of the display will animate.

Once the battery charging has been completed the display will change to **Trickle charge**; at this point the battery is maintained with a low level charge.



Note: While charging your battery your meter will not operate.

Tip: We recommend that you charge your battery overnight prior to the next working day.

Note: When not in use the battery will slowly discharge (this is for the battery monitoring circuit) which is normal.

To access the user settings menu on your HD-CM+ meter switch your meter on, select **Main Menu** and scroll down to **User settings**; press the right arrow button or the **OK** button to access these options. In user settings menu you can customise the display **Backlight**, **Brightness** and **Contrast**, adjust the **Sleep** timer, change the **RF units** of measurements, adjust the **Squelch**, restore the **Default** setup and verify the **Version** number.

Shutdown	
Main menu	
Backlight	on
Brightness	10
▲ ▼ For more	

The Backlight can be set as On or Off

The Brightness can be set from Off (0) to 15 levels; 14 is recommended.

The Contrast can be set from Off (0 which is invisible) to 40 (which is black); 16 to 22 is recommended.

Contrast	20
Sleep	6M
RF Units dBmV	
Squelch -21.2 dBmV	
▲ ▼ For more	

The Sleep timer can be set from 1 to 30 minutes or set to Never (always on). The sleep timer is a useful feature that will prevent your battery from accidentally running down.

The RF units available are dBuV, dBmV and dBm

The Squelch can be set from -26.2 to -6.2 dBmV (or **Off**); this is the threshold adjustment where you can define what level represents a valid signal.

The Defaults function will reset the setup mode back to factory default.

The Version is for information purposes and has no other function.

RF Units dBmV	
Squelch -21.2 dBmV	
Defaults	
3. 0Aa-0024	
▲ ▼ For more	

To edit a value press the **OK** button and use the **Up** and **Down** buttons to adjust and then press the **OK** button to set. Once you have setup your meter to your preferences return to the top of the menu where you can choose to return to the **Main menu** or **Shut down** the meter. The meter can be turned off at any time by holding the **Off** button.

Scan type menu overview

Shut down
Main menu
▶ Full scan
Short scan
Manual scan

On switching on your HD-CM+ meter you are presented with the **Scan type menu**; (from here you can select the options as illustrated on the left). The **Full Scan** will start a scan of the current selected channel plan, the **Short scan** will scan selected channels within the channel plan, the **Manual scan** allows you to navigate using a marker to investigate services of interest.

Main menu overview

Shut down
▶ Scan type
Select plan
Slope test
▲ ▼ For more



Voltmeter
Spectrum
Leakage test
▶ User settings
▲ ▼ For more

From the **Main menu** you can select one of the options as illustrated shown on the left. Select plan allows you to choose which channel plan to used from your downloaded channel plan pack (via the www.horizonhge.com web site). The **Slope test** provides a 5 point simultaneous measurement mode for the purpose of slope correction. The **Voltmeter** enables the measurement of any voltage present on the coaxial cable; the measurement range is from 0 to 120 Volts AC or DC. The **Spectrum** function gives you a real-time graphical representation of the signals present on the co-axial cable, this mode can also be used to detect noise with the use of the supplied rubber duck antenna. The **Leakage test** has provider specific frequencies for the purpose of checking for leakage (via a modified spectrum and noise level display). The **User settings** have already been covered at the top of this page.

Start up



The **Scan type** menu is the first menu that you are presented with once the start-up animation has completed.

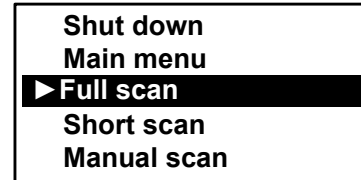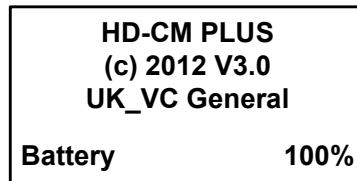


During start up information about your meter and the current selected plan will be shown.


From the **Scan type** menu you can choose to **Shut down**, go to the **Main menu**, select a **Full scan** for a complete scan including frequencies outside the channel plan, select a **Short scan** that only scans the channel plan selected or **Manual scan** for a complete band view with cursor navigation to select the carrier of interest.

Main menu

The options available from the Main menu include **Shut down**, **Scan type**, **Select plan**, **Slope test**, **Voltmeter**, **Spectrum**, **Leakage test** and **User settings**. Over the next few pages we will cover these options in detail.

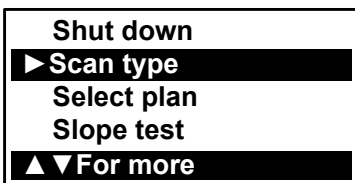

Note: The **Scan type** menu will return you to the first menu.

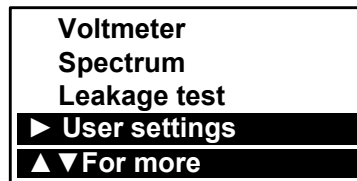


Note: The **Select plan** menu is covered in the next section.



Note: The **User settings** menu is described on page 6 of this manual.

Select plan

The HD-CM+ can store up to 20 channel plans in its internal memory making it easy to select the correct plan for the required installation. Custom plans can also be requested from Horizon Global Electronics Ltd. Select the **Main menu** option from the **Scan type** menu and follow the steps below to select an alternate plan.

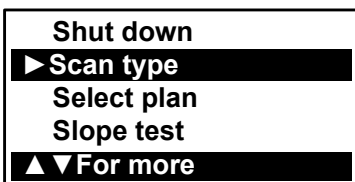


Select **Main menu** and then scroll down to **Select Plan**, then press **OK**.

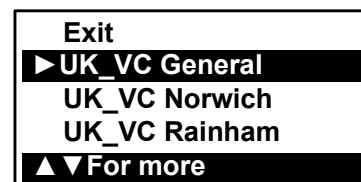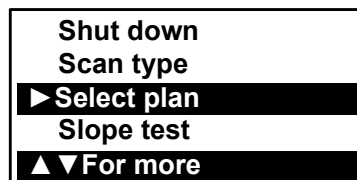

Note: Use the arrow buttons to navigate the menus and the **OK** button to select. You can turn the HD-CM+ off at any time by holding the **Off** button for 5 seconds.


Once you have selected the required plan you will be returned to the **Scan menu**.

By selecting **Full scan** the HD-CM+ will start at the lowest frequency of the selected transponder plan and scan upwards stopping on each active service found. The direction of scan can be selected by pressing either the left or right arrow button.


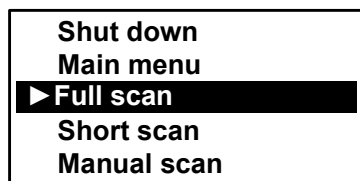


Note: While scanning for services the current channel plan frequencies and service names are shown in the top left and right of the display.

The **Short scan** option only scans a predetermined group of channels within the current plan (usually specified by the cable service provider).

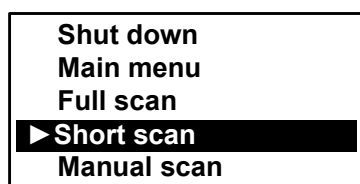




The **Manual scan** option gives you a wide span view of the available cable services, which can be selected by moving a cursor at the bottom of the screen to the require carrier, pressing **OK** will bring up the measurement screen for the channel selected.

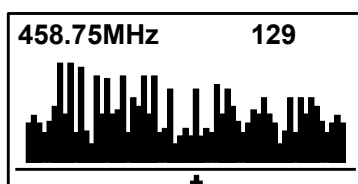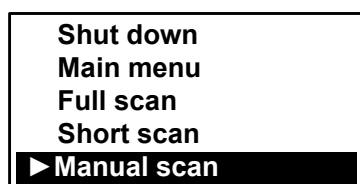




Note: If no service is found when selecting a carrier with the OK button the meter will scan upwards in frequency until another valid carrier is found.

The Illustrations below is where the meter has locked on to a service (digital and analogue are shown in this example).

Digital measurements

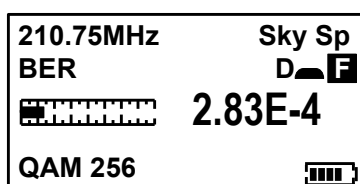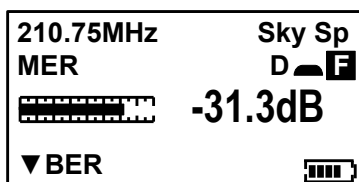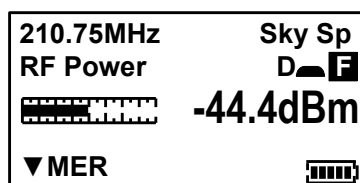

Analogue measurements

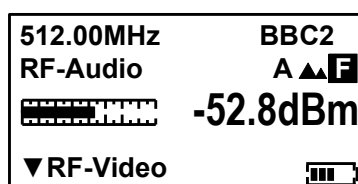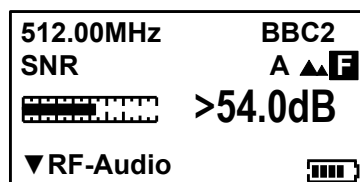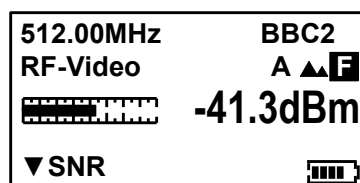


Symbol key

Digital	D
Analogue	A
Full scan	F
Short scan	S
Manual scan	M

Slope test

The **Slope test** function is available from the **Main menu** and provides 5 predetermined points of measurement.

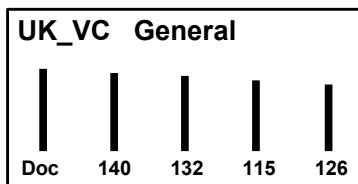

The slope test gives you a quick method of assessing the level of slope and can be used where applying slope equalisation. Pressing the **On** button will show the service levels with reference to 0dB.

Doc -25.6dBmV ref 0dB	
140	- 1.5dB
132	- 1.6dB
115	- 1.7dB
126	- 1.8dB

Press the **On** button to select the next channel in the slope test, from here you can exit to the Scan menu by pressing the **OK** button, pressing the right or left arrow button will re-start a channel scan until the next valid service is found.


Voltmeter

The Voltmeter function is available from the Main menu and will display AC or DC voltages from 0 to 110 Volts.



Pressing the right or left arrow button will re-start a channel scan until the next valid service is found.

Spectrum

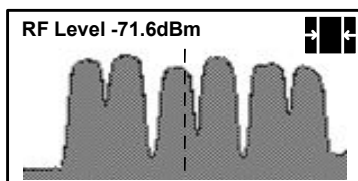

The **Spectrum** display (and **Channel view**) can be adjusted with the left or right arrow key and the up or down key to select the type of adjustment, which is visually indicated at the top right of the screen. To exit this mode press the "**OK**" button to access the sub menu. The top line will cycle through **RF Power**, **Centre frequency** and **Span**.

Pressing the up or down key in spectrum mode will select the mode for adjustment and the symbol in the top right corner of the display, pressing the left or right arrows will adjust the currently selected mode.



Span




Frequency






Amplitude

While operating in spectrum mode the top line of the display will alternate between Frequency in MHz Span in MHz and RF Power (in dBmV at centre frequency).

Constellation

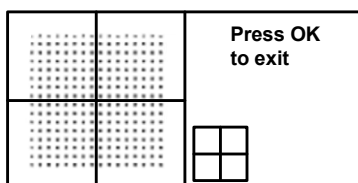

For digital services a constellation display is also available, the constellation diagram can be navigated by using the arrow buttons, a marker in the smaller box will show where in the constellation field you are. The **OK** button will exit this function.

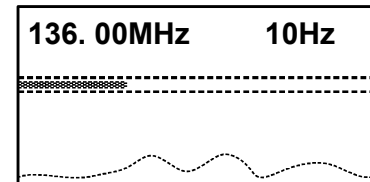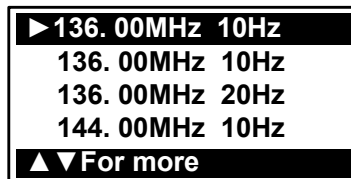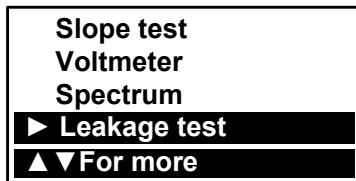

The **Leakage test** is available from the **Main menu**; this feature enables you to inspect spot frequencies (as determined by the cable service provider) for the purpose of detecting unwanted leakage or sources of interference. Once you have selected the required frequency from the list by using up and down arrow buttons and the **OK** button to select, you are then presented with a noise level indicator (when a greyed out signal bar is shown the noise is under the threshold required by the cable provider) and a rapid signal scan. Pressing either the left or right arrow button will return you to the channel scan in the direction selected.

Data logging

The data logging function will enable you to store your measurement values in a sequential file ready for download to your PC and insertion into your documentation. The file output from the log reader program is .csv which can be used with applications such as Microsoft Office and Open Office.



The log reader application for the HD-CM+ is available for download from the Horizon Global Electronics Ltd web site.
www.horizonhge.com

Downloads

New channel plans listed by region and provider can be downloaded to your HD-CM+ via the Horizon Global Electronics web site www.horizonhge.com



HD-CM Plus Downloads

Region:

Operator:

Available Channel Plans

BE_Antwerpen
BE_Berchem
BE_General
BE_Gent
BE_Hasselt
BE_Leuven
BE_Mechelen
BE_Torhout
CH_Cablecom
CN_Cable A-D
CN_Cable AIA
CN_Cable DIG
DE_Spaun custom
DK_Bredbaand N1
DK_Bredbaand N2
DK_Bredbaand N3
DK_Parknet
DK_Sjaelland 101
DK_Sjaelland 1101
DK_Sjaelland 1147
DK_Sjaelland 1163

Selected Channel Plans

After you have selected the desired channel plans you can either download your upgrade program or receive it by email.

You can use the region and operator dropdowns to filter the available channel plans.


Email to:

Downloads (continued)

Important: If you have logged any measurements make sure you download these to your computer before updating your transmitter list as this operation will reset the log entries.

Select the plans that you require and click on **Download Now**; you can also choose to have the settings file emailed to you. You can choose to save this file (we recommend to your desktop so that it's easily found), or open it directly.


Open your received file and a small program will appear as illustrated above. If you have already connected your meter to your computer and downloaded the drivers you can click on **Transfer** to load your new transmitter settings into your meter. The driver installation is detailed on the next few pages.

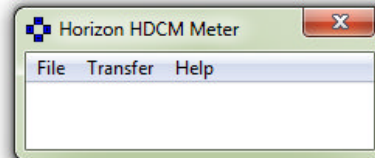


On connecting your HD-CM+ to your computer via the USB lead supplied the meter will enter **Program mode**.



Click on Transfer to upload the new channel plan data to your HD-CM+ meter.

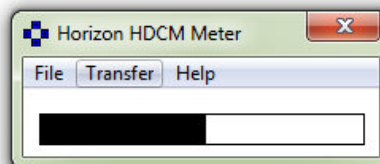

When complete click OK and close the program, you can disconnect your meter and it will now be ready for use.


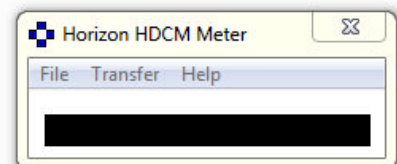


Error messages

If a **"No devices found"** error should occur this indicates that the automatic USB driver installation has not been able to complete.

A manual USB driver installation package is available for download from the Horizon Global Electronics Ltd web site.

Should a **"USB Port Error"** occur check the connection from your meter to the PC.

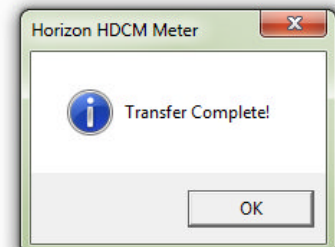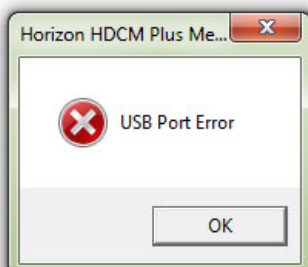


USB driver installation

The USB driver installation for the most part is automatic on connection of your HD-CM+ meter to your computer via USB for the first time. The steps illustrated show a typical Windows XP installation.

Before starting the driver installation process please ensure that your computer is connected to the internet, and that your HD-CM+ meter has at least 25% battery charge remaining.


Connect your HD-CM+ meter to your computer with the USB lead supplied and the Found New Hardware wizard will begin.

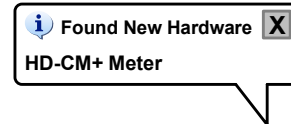

When prompted select **Yes, this time only** and then click the **Next>** button.



Select **Install the software automatically (Recommended)** then click the **Next>** button

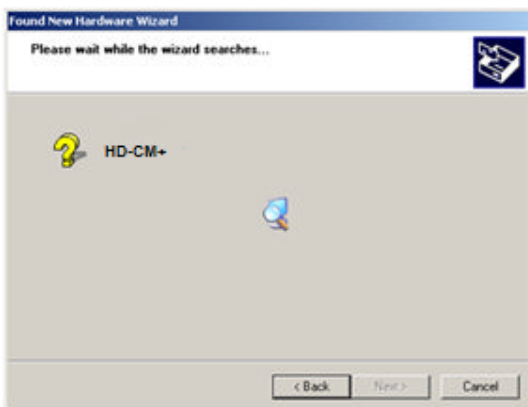


While your computer is searching for the drivers a window like this will be visible.



The first stage of the driver installation is complete. Click **Finish** to continue loading the next driver.

USB driver installation

The second stage of the USB driver installation will now begin.

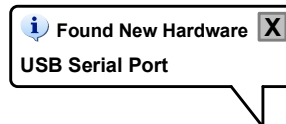


To complete the installation of the required drivers ensure that **Install the software automatically (Recommended)** is selected, then click the **Next>** button.



While your computer is searching for the driver a window like this will be visible.



The HD-CM+ driver installation process is now complete. Click the **Finish** button to close the window.

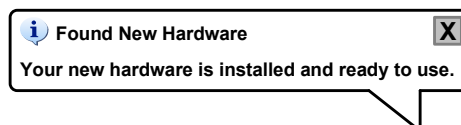

You are now ready to download cable plan updates or firmware updates from the **www.horizonhge.com** web site.

128x64 pixel backlit monochrome screen

Field-replaceable F barrel for RF In

Variable bandwidth to 8MHz

Frequency range 51MHz to 858MHz, analogue and digital channels

Rapid scan over full band

Selectable limited plan for speed of installation

Signal squelch adjustable from -75dBm to -55dBm

Input levels from -75dBm to +17dBm

Clear indication of digital and analogue channels

Digital RF level indication by bargraph and in dBm or dBuV or dBmV

MER value by bargraph and in dB

BER value by bargraph and in scientific notation

Display of QAM value and symbol rate for digital carriers

Support for QAM rates up to 256

Symbol rates from 0.87 to 6.9 Mbaud

Analogue Video level by bargraph and in dBm or dBuV or dBmV

Analogue Video signal C/N ratio by bargraph and in dB

Analogue Audio level by bargraph and in dBm or dBuV or dBmV

Selectable Slope channels for equalization (up to 5 frequencies)

High capacity Ni-MH 3300mAh battery for 7 hours of operation from a single charge

Agile channel plan format, downloadable plans

Voltmeter facility, measures AC voltage and frequency or DC voltage on the cable (to 110V)

Results logging for quality verification (500 entries, uploadable to PC)

USB-2 B-type socket for PC connection

LIMITED WARRANTY

Horizon Global Electronics Ltd will, at our option, repair or replace any Horizon Global Electronics Ltd HD-CM+ meter found to be defective in manufacture within the warranty period of 1 year.

The warranty period is determined by the date of purchase. Keep your receipt as proof of your purchase, otherwise the warranty would be determined by the date of manufacture.

This warranty does not apply to damage caused by accident, misuse or deliberate tampering with the unit. Tampering with the seals will immediately invalidate your warranty. This does not affect your statutory rights.

DECLARATION OF CONFORMITY

Manufacturer: Horizon Global Electronics Ltd.

Address: First Floor Office, Allen House, Edinburgh Way, Harlow, Essex, CM20 2HJ

Declares that the HD-CM+ cable installation meter complies with the following directives and standards.

Safety EN610 10-1:2001 EMC 61326:1997

All Horizon Global Electronics Ltd products are ROHS compliant.

Technical Department
Horizon Global Electronics Ltd.
July 2012

CONTACT DETAILS

Horizon Global Electronics Ltd.

First Floor Office
Allen House
Edinburgh Way
Harlow
Essex
CM20 2HJ
United Kingdom

Tel: +44(0)1279 417 005
Fax: +44(0)1279 417 025
Email: sales@horizonhge.com
Web: www.horizonhge.com



Producer ID for the purpose of WEEE regulations: WEE/BB019UV